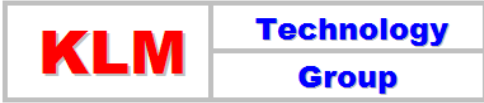


KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	 www.klmtechgroup.com	Page : 1 of 85
		Rev: 02
		Rev 01 March 2007 Rev 02 February 2014
KLM Technology Group #03-12 Block Aronia, Jalan Sri Perkasa 2 Taman Tampoi Utama 81200 Johor Bahru Malaysia	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Co Authors Rev 01 A L Ling Rev 02 Reni Mutiara Sari
		Editor / Author Karl Kolmetz

KLM Technology Group has developed; 1) Process Engineering Equipment Design Guidelines, 2) Equipment Design Software, 3) Project Engineering Standards and Specifications, and 4) Unit Operations Manuals. Each has many hours of engineering development.

KLM is providing the introduction to this guideline for free on the internet. Please go to our website to order the complete document.

www.klmtechgroup.com

TABLE OF CONTENT

INTRODUCTION	6
Scope	6
General Consideration	7
DEFINITIONS	13
NOMENCLATURE	16
THEORY	17
Selection Criteria of Flowmeter	17
Accuracy	17
Flow Range and Rangeability	18
Discharge Coefficient	19
Reynolds Number	19
Flow Measurement Device	20

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 2 of 85
		Rev: 02
		February 2014

I. Differential Pressure Flowmeter	20
A. Orifice Plate	22
I) Design and Construction	22
II) Flow Calculations of Orifice Plate	24
a) Liquid flow	25
b) Gas flow	27
B. Venturi Tube	27
I) Design and Construction	27
II) Flow Calculations of Orifice Plate	29
C. Pitot-Static Tube	30
I) Design and Construction	30
II) Flow Calculation of Pitot - Static Tube	32
D. Nozzle	33
I) Design and Construction	33
II) Flow Calculations of Nozzle	34
II. Variable Area Flowmeter	36
A. Rotameter	36
I) Design and construction	36
II) Flow Calculation Equation (Spherical Ball as Float)	37
B. Movable Vane Meter	38
I) Design and construction	38
C. Weirs, Flume	39
Weirs	39
I) Design and Construction	39
II) Flow Calculations of Weirs	41
Flume	42
I) Design and Construction	42
II) Flow Calculations of Flume	44
III. Positive Displacement Flowmeter	45
I) Design and Construction	45

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 3 of 85
		Rev: 02
		February 2014

A. Commercially Positive Displacement Types	46
IV. Turbine Flowmeter	50
I) Design and Construction	50
Paddlewheel Flowmeter	51
V. Electromagnetic Flowmeter	52
I) Design and Construction	52
VI. Ultrasonic Flowmeter	53
I) Design and Construction	53
A. Doppler	54
B. Transit-Time Flowmeters	54
II) Flow Calculations of transit-time	55
VII. Coriolis Flowmeter	56
I) Design and Construction	56
VIII. Vortex shedding Meter	57
I) Design and Construction	57
General Flowmeters Selection Guide	59

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 4 of 85
		Rev: 02
		February 2014

APPLICATION

Example Case 1: Orifice Sizing for Liquid Flow	60
Example Case 2: Orifice Sizing for Gas Flow	63
Example Case 3: Venturi Tube Sizing for Liquid Flow	66
Example Case 4: Venturi Tube Sizing for Gas Flow	69
Example Case 5: Nozzle Sizing for Liquid Flow	73
Example Case 6: Nozzle Sizing for Gas Flow	76
Example Case 7: Pitot static Tube Sizing for Liquid Flow	79
Example Case 8: Pitot static Tube Sizing for Gas Flow	80

REFERENCES	83
-------------------	----

LIST OF TABLE

Table 1: Variance Orifice plate design and application	23
Table 2: The performance and applications of common differential pressure flowmeters	35
Table 3: Dimension and Capacities of One=Piece Flume	44
Table 4: Typical Flowmeter Applicable Services	59

LIST OF FIGURE

Figure 1: Range of Error	18
Figure 2: A Concentric Sharp Edged Orifice Plate Flowmeter	23
Figure 3: Types of pressure taps for orifices	25
Figure 4: A Venturi Tube Flowmeter	28
Figure 5: Simple Pitot tube	30
Figure 6: Averaging Pitot 'annubar'	31
Figure 7: A Nozzle Flowmeter	34
Figure 8: ISA 1932 nozzle and long radius nozzle	35
Figure 9: A Cross Sectional of Rotameter	36
Figure 10: Typical Rotameter Bob Geometries	37
Figure 11: Rotameter	38

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 5 of 85
		Rev: 02
		February 2014

Figure 12: Movable Vane Meter	39
Figure 13: Weirs	40
Figure 14: V-notch Weirs	40
Figure 15: Perpendicular Weir	41
Figure 16: Flume	43
Figure 17: Type of Positive Displacement Flowmeters	46
Figure 18: Roots Meter	48
Figure 19: CVM Meter	49
Figure 20: Diaphragm Meter	50
Figure 21: Simple turbine flowmeter	50
Figure 22: Selection Guide for displacement and Turbine meter	51
Figure 23: Paddlewheel Flowmeter	52
Figure 24: Element of electromagnetic flow meter	53
Figure 25: Typical Doppler flowmeter operating principle	54
Figure 26: Transit-time ultrasonic flowmeter	55
Figure 27: U-shaped Coriolis mass meter	57
Figure 28: Vortex shedding Meter	58

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 6 of 85
		Rev: 02
		February 2014

INTRODUCTION

Scope

Measurement of a flowing fluid can be a challenge because it requires that the mass or volume of material be quantified as it moves through a pipe or conduit. Problems may arise due to the complexity of the dynamics of fluid flow. Flow measurements draw on a host of physical parameters that are also often difficult to quantify.

This design guideline includes the selection method of the flow measurement instrumentation depending on the applications. It also assist engineers to size some flow measurement instruments such as an orifice plate, Venturi tube, Pitot tube, Rotameter, vane meter, positive displacement flow meter and others with the engineering calculations, or by utilizing the spread sheet provided in this package.

All the important parameters use in the guideline are well explained in the definition section which will help the reader understand the meaning of the parameters and terms.

The theory section covers the selection of flow meters and the general theories applied for the sizing of each type of the flow meter. In the application section, several case studied are shown and discussed in detail step by step for the calculation. The case studied will aid the reader to complete the selection and sizing for the several flow meters base on their own system.

At the end of this guideline, example specification data sheets for the flow measurement instrumentation are included based on an industrial example. A calculation spreadsheet is included as well to aid the user to apply the theory of calculations.

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 7 of 85
		Rev: 02
		February 2014

General Consideration

The importance of industrial flow measurement has grown in the past 50 years, not just because its widespread use for accounting purposes, such as custody transfer of fluid from supplier to customers, but also because of its application in manufacturing processes. Examples of the industries involved in flow measurement included food and beverage, oil and gas industrial, medical, petrochemical, power generation, and water distribution.

In custody transfer metering, being constantly aware that flow measurement equates to dollars, changes the perspective accordingly. The goal sought is that custody transfer measurement be converted to dollars \pm zero. Quantities for custody transfer are treated as absolute when they are billed. The responsibility for this measurement, then, is to reduce all inaccuracies to a minimum so that a measured quantity can be agreed upon for exchanging custody. Control measurement may be accepted at \pm 2%; operational measurement may require no more than \pm 5%, as contrasted with the \pm 0% target for custody transfer metering^[5].

Flow measurement is the determination of the quantity of a fluid, either a liquid, or vapor, that passes through a pipe, duct or open channel. Flow may be expressed as a rate of volumetric flow (such as gallons per minute, cubic meters per minute, cubic feet per minute), mass rate of flow (such as kilograms per hour, pounds per hour), or in terms of a total volume or mass flow (integrated rate of flow for a given period of time).

Fluid flow measurement can be divided into several types; each type requires specific considerations of such factors as accuracy requirements, cost considerations, and use of the flow information to obtain the required end results. Normally the flow meter is measure flow indirectly by measuring a related property such as a differential pressure across a flow restriction or a fluid velocity in a pipe. A number of different fundamental physical principles are used in flow measurement devices.

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 8 of 85
		Rev: 02
		February 2014

There are various kinds of the flowmeters available in market; they can be classifier types as;

- i) Difference pressure flow meter
 - a. Orifice plate,
 - b. Venturi tube,
 - c. Pitot tube and
 - d. Nozzle

- ii) Variable area flowmeter
 - a. Rotameter
 - b. Movable vane meter, and
 - c. Weir, flume

- iii) Positive displacement flowmeter
 - Tri-rotor type PD meter,
 - Birotor PD meter,
 - Piston type PD meter,
 - Oval gear PD meter,
 - Nutating disk type PD meter,
 - Sliding-vane type PD meter,
 - Roots PD meter,
 - The CVM meter ,and
 - Diaphragm meter

- iv) Turbine flowmeter

- v) Electromagnetic flowmeter

- vi) Ultrasonic flowmeter
 - a. Doppler
 - b. Transit- Time

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 9 of 85
		Rev: 02
		February 2014

- vii) Coriolis (Mass) flowmeter
- viii) Vortex Shedding Meter

Differential Pressure Flowmeter

Approximately 40% of all liquid, gas, and steam measurements made in industry are still accomplished using common types of differential pressure flowmeters (orifice plate, venturi tube, and nozzle). The operation of these flowmeters is based on the observation made by Bernoulli that if an annular restriction is placed in a pipeline, then the velocity of the fluid through the restriction is increased. The increase in velocity at the restriction causes the static pressure to decrease at this section, and a pressure difference is created across the element. The difference between the pressure upstream and pressure downstream of this obstruction is related to the rate of fluid flowing through the restriction and therefore through the pipe. A differential pressure flowmeter consists of two basic elements: an obstruction to cause a pressure drop in the flow (a differential producer) and a method of measuring the pressure drop across this obstruction (a differential pressure transducer) ⁽⁴⁾.

Variable Area Flowmeter

Variable area flowmeters refers to those meters in which the minimum cross-sectional area available to the flow through the meter varies with the flow rate. This type meters include the Rotameter and the movable vane meter used in pipe flows, and the weir or flume used in open-channel flows. The measure of the flow rate is a geometrical quantity such as the height of a bob in the Rotameter, the angle of the vane, or the change in height of the free surface of the liquid flowing over the weir or through the flume.

For pipe flows, variable area flowmeters are most suitable for low flow rates of gases or liquids at moderate temperatures and pressures. Favorable features include rugged construction, high reliability, low pressure drop, easy installation, and low cost. Disadvantages include measurement uncertainty of 1% or more, limited range (10:1), slow response, and restrictions on the meter orientation. A generally good price/performance ratio has led to widespread use of these meters in numerous scientific and medical instruments and in many industrial applications for flow monitoring.

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 10 of 85
		Rev: 02
		February 2014

Positive Displacement (PD) Meters

Positive displacement (PD) meters measure volumetric flow by continuously separating (isolating) a flow stream into discrete volumetric segments, counting them, and then returning it to the flowing stream. Positive displacement (PD) meters are used for measurement of liquids and gas, primarily liquids for pipeline uses. Two of the most common meters at residences are the water and gas meter, both of which are usually positive displacement meters.

Each design and working mechanism can be noticeably different from another; all positive displacement meters have three components a stationary fluid retaining wall (outer housing), a mechanism (internal mechanism) that momentarily entraps inlet fluid into a partitioned chamber before releasing it to the downstream side of the meter and the display or counter accessories that determines the number of entrapments of fluid in the dividing chamber and infers the flow rate and the total volume of flow through the meter.

Application for the low line pressure, design of the outer housing of the PD flowmeter is single walled, while for higher operating pressures, the housing is double walled where the inner wall is the containment wall for the entrapment chamber and the outer wall is the pressure vessel.

Difference designs it can be due to difference measurement applications. For liquid applications, PD meters work best for liquids with heavy viscosities. Almost all PD meters require precisely machined, high tolerance mating parts; thus, measured fluid must be clean for longevity of the meter and to maintain the measurement precision.

Positive displacement meters will measure with high accuracy over a wide range of flow rates, and are very reliable over long periods on clean fluids or with line filters. In general, PD meters have minimal pressure drop across the meter; hence, they can be installed in a pipeline with very low line pressures.

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 11 of 85
		Rev: 02
		February 2014

Turbine Flowmeter

Turbine flowmeters measure the velocity of liquids, gases and vapors in pipes, such as hydrocarbons, chemicals, water, cryogenic liquids, air, and industrial gases. High accuracy turbine flowmeters are available for custody transfer of hydrocarbons and natural gas. This flowmeter can be applied to sanitary, relatively clean, and corrosive liquids in sizes up to approximately 24 inches. The flow of corrosive liquids can be measured with proper attention to the materials of construction of all wetted parts, such as the body, rotor, bearings, and fittings.

Applications for turbine flowmeters are found in the water, petroleum, and chemical industries. Water applications include distribution systems within and between water districts. Petroleum applications include the custody transfer of hydrocarbons. Miscellaneous applications are found in the food and beverage, and chemical industries.

Electromagnetic Flowmeter

Electromagnetic flowmeter measures flow according to Faraday's law of magnetic induction. A full-flow electromagnetic flowmeter is a nonintrusive device that consists of a magnetic coil that encircles the pipe, and two electrodes drilled into the pipe along a diameter flush with the inner surface of the pipe so that the electrodes are in contact with the fluid but do not interfere with the flow and thus do not cause any head loss [fluid mechanical]. In fluid measurement, the "conductor" is the process fluid flow, the faster it flows, the greater the voltage induced across the electrodes of the meter.

Ultrasonic Flowmeter

Ultrasonic flowmeters are normally used to measure flow for pure water, wash water, sewage, process liquids, oils, and other light homogeneous liquids. The basic requirement is that the fluid be capable of ultrasonic wave propagation and have a reasonably axis-symmetrical flow, which flow must be measured without any head losses or any pressure drop.

The basic operating principle of these meters is to detect flow through a pipe, ultrasonic flowmeters use acoustic waves or vibrations of a frequency >20 kHz. Depending on the design, they use either wetted or nonwetted transducers on the pipe perimeter to couple ultrasonic energy with the fluid flowing in the pipe.

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 12 of 85
		Rev: 02
		February 2014

Compared to electromagnetic flowmeters, it can suit for variety kind of flowing liquid, but electromagnetic flowmeters only for the liquid which have minimum electric conductivity. In addition, the cost of ultrasonic flowmeters is nearly independent of pipe diameter, whereas the price of electromagnetic flowmeters increases drastically with pipe diameter.

Coriolis Meter

Coriolis meters have become widely used in industrial environments because they have the highest accuracy of all types of flowmeters. These meters are used for both custody transfer and control measurement. Its can be used on liquids, gases and can handle corrosive fluids and fluids that contain solids. They measure mass directly, rather than inferentially weight (mass). If the desired measure is volume, then some correction for density at fluid base conditions must be made.

The meter consists of one or two flow tubes enclosed in sensor housing. These tubes are vibrated at their natural frequency by an electromagnetic drive coil located at the center of the bend in the tube. The vibration is similar to that of a tuning fork, completing a full cycle about 80 times each second.

Vortex Shedding Meter

A vortex shedding meter consists of a sharp-edged bluff body (strut) placed in the flow that serves as the vortex generator, and a detector (such as a pressure transducer that records the oscillation in pressure) placed a short distance downstream on the inner surface of the casing to measure the shedding frequency[yunus].

When selecting the flowmeter for the specific applications, certain studied have to be carried out. Review the certain meters service record and reference to industry standards and users within an industry are important points to review in choosing the best meter for the given applications.

Difference fluid properties (viscosity, type of fluid, velocity profiles, flow profiles, Reynolds number) are the important cause of the differential flow measurement available in market. Many flowmeter techniques have been developed with each suited to a particular application, only few flowmeter can used for widespread application and no one single can use for all applications.

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 13 of 85
		Rev: 02
		February 2014

DEFINITION

Accuracy - The ability of a flow measuring system to indicate values closely, approximating the true value of the quantity measured.

Beta Ratio - The ratio of the measuring device diameter to the meter run diameter (i.e., orifice bore divided by inlet pipe bore) or can be define as ratio of small to large diameter in orifices and nozzles.

Capacity - Is the water handling capability of a pump commonly expressed as either gallon per minute (gal/min) or cubic meter per minute (m³/min).

Coefficients Discharge - The ratio of the true flow to the theoretical flow. It corrects the theoretical equation for the influence of velocity profile, tap location, and the assumption of no energy loss with a flow area between 0.023 to 0.56 percent of the geometric area of the inlet pipe.

Coriolis Flowmeter - Direct mass measurement sets Coriolis flowmeters apart from other technologies. Mass measurement is not sensible to changes in pressure, temperature, viscosity and density. With the ability to measure liquids, slurries and gases, Coriolis flowmeters are universal meters.

Custody Transfer - Flow measurement whose purpose is to arrive at a volume on which payment is made/received as ownership is exchanged.

Diameter Ratio (Beta) - The diameter ratio (Beta) is defined as the calculated orifice plate bore diameter (d) divided by the calculate meter tube internal diameter (D).

Differential Pressure- The drop in pressure across a head device at specified pressure taps locations. It is normally measured in inches or millimeters of water.

Differential Pressure Flowmeter- A flowmeter in which the pressure drop across an annular restriction placed in the pipeline is used to measure fluid flow rate. The most common types use an orifice plate, Venturi tube, or nozzle as the primary device.

Differential Pressure Transmitter- Secondary device that measures the differential pressure across the primary device and converts it into an electrical signal.

Discharge Coefficients- The ratio of the true flow to the theoretical flow. It corrects the theoretical equation for the influence of velocity profile, tap location, and the assumption

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 14 of 85
		Rev: 02
		February 2014

of no energy loss with a flow area between 0.023 to 0.56 percent of the geometric area of the inlet pipe.

Electromagnetic Flowmeter -An electromagnetic flowmeter operate on Faraday's law of electromagnetic induction that states that a voltage will be induced when a conductor moves through a magnetic field. The liquid serves as the conductor and the magnetic field is created by energized coils outside the flow tube.

Manometer- A device that measures the height (head) of liquid in a tube at the point of measurement.

Mass Meter- Meter that measures mass of a fluid based on a direct or indirect determination of the fluid's weight rate of flow.

Measurement- The act or process of determining the dimensions, capacity, or amount of something.

Meter Factor (MF) - The meter factor (MF) is a number obtained by dividing the quantity of fluid measured by the primary mass flow system by the quantity indicated by the meter during calibration. For meters, it expresses the ratio of readout units to volume or mass units.

Meter Static- Meters that measure by batch from a flowing stream by fill and empty procedures.

Non-pulsating (see pulsation) - Variations in flow and/or pressure that are below the frequency response of the meter.

Orifice Plate- A thin plate in which a circular concentric aperture (bore) has been machined. The orifice plate is described as a .thin plate and with sharp edge, because the thickness of the plate material is small compared with the internal diameter of the measuring aperture (bore) and because the upstream edge of the measuring aperture is sharp and square.

Pipeline Quality- Fluids that meet the quality requirements of contaminant as specified in the exchange contract such as clean, non-corrosive, single phase, component limits, etc.

Positive Displacement Flowmeter -The positive displacement flowmeter measures process fluid flow by precision-fitted rotors as flow measuring elements. Known and fixed

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 15 of 85
		Rev: 02
		February 2014

volumes are displaced between the rotors. The rotation of the rotors is proportional to the volume of the fluid being displaced.

Pulsation- A rapid, periodic, alternate increase and decrease of pressure and/or flow. The effect on a meter depends on the frequency of the pulsation and the frequency response of the meter.

Uncertainty - A statistical statement of measurement accuracy based on statistically valid information that defines 95% of the data points (twice the standard deviation).

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.

KLM Technology Group Practical Engineering Guidelines for Processing Plant Solutions	Fluid Flow Measurement Selection and Sizing (ENGINEERING DESIGN GUIDELINE)	Page 16 of 85
		Rev: 02
		February 2014

NOMENCLATURE

A_1	Sectional area of upstream pipe, ft ²
A_2	Sectional area of meter bore, ft ²
C	Correction constant of the design of Pitot-static tube (from vendor of flowmeter), dimensionless
C_d	Discharge coefficient, dimensionless
D	Internal diameter of pipe, in
g	Acceleration of gravity, 32.2 ft/s ²
h_1	Height of flow for upstream, ft
h_2	Height of flow for downstream, ft
h_L	Head loss due to friction in meter, ft
k	Gas isentropic exponent, dimensionless
P_1	Absolute pressure for upstream, psia
P_2	Absolute pressure for downstream, psia
Q_1	Mass flow, gal/min
q	Volumetric flow rate, ft ³ /s
q_m	Mass flow rate, lbm/s
Re	Reynolds number, a dimensionless number
Y	Expansibility factor, for compressible fluid (Liquid =1)

Greek letters

β	Beta ratio, ratio of orifice bore diameter to pipe diameter
ε	Equivalent roughness of the pipe wall material, in
ρ	Weight density of fluid, lbm/ft ³
μ	Absolute (dynamic) viscosity, cp
v_1	Velocity for upstream, ft/s
v_2	Velocity for downstream, ft/s

These design guideline are believed to be as accurate as possible, but are very general and not for specific design cases. They were designed for engineers to do preliminary designs and process specification sheets. The final design must always be guaranteed for the service selected by the manufacturing vendor, but these guidelines will greatly reduce the amount of up front engineering hours that are required to develop the final design. The guidelines are a training tool for young engineers or a resource for engineers with experience.

This document is entrusted to the recipient personally, but the copyright remains with us. It must not be copied, reproduced or in any way communicated or made accessible to third parties without our written consent.